


ZIDNI PRAVOUGAONI VENTILATORI

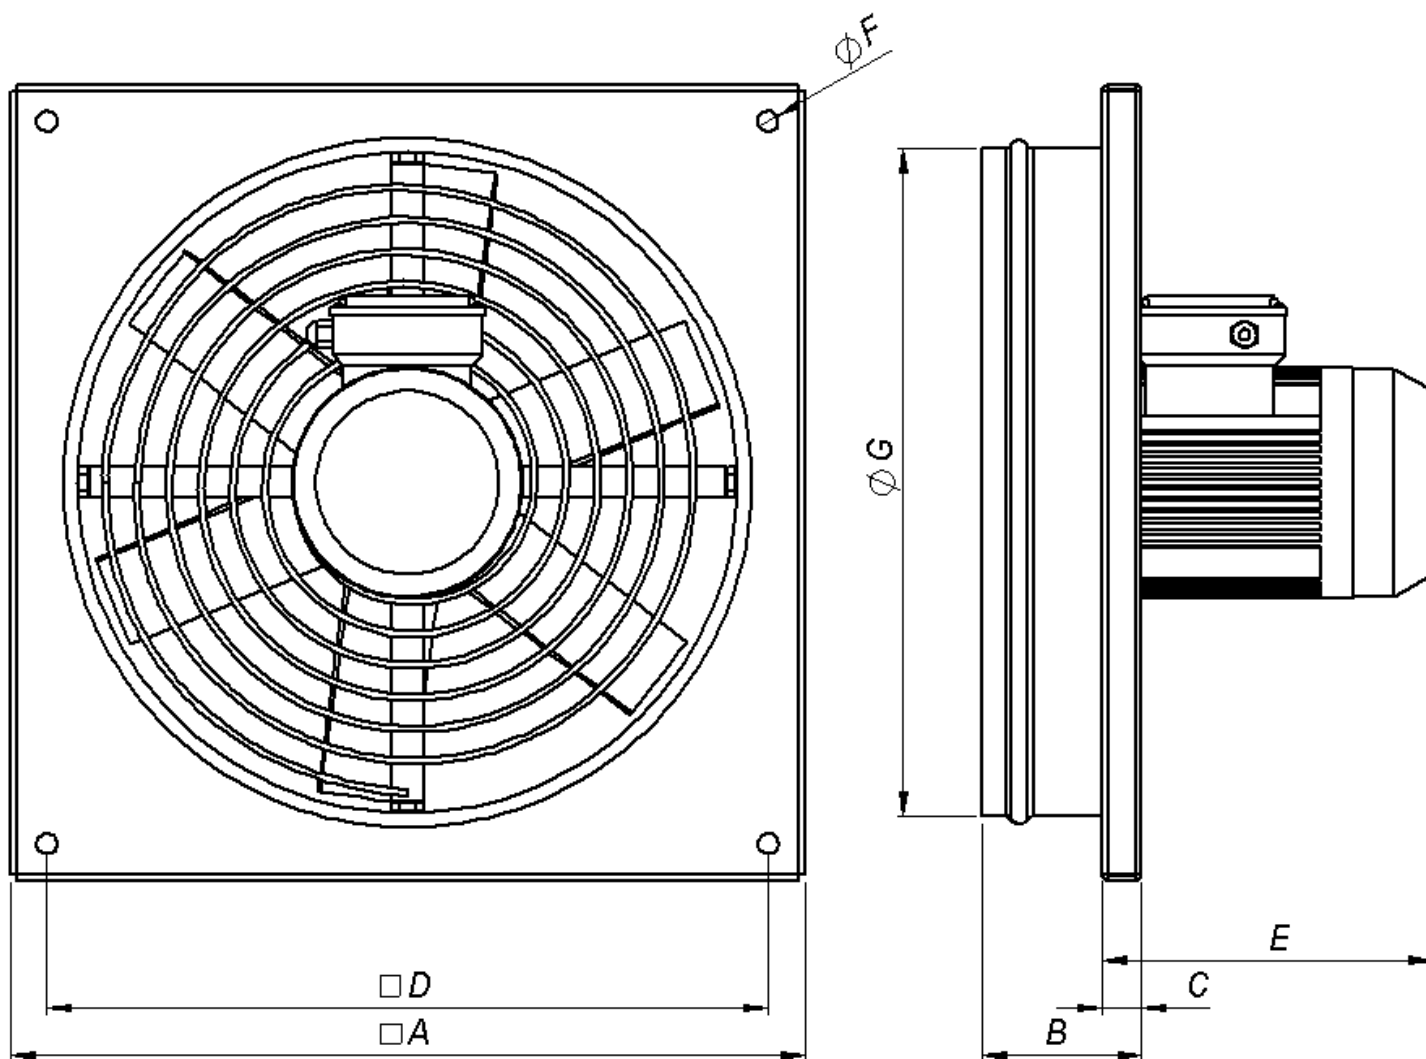

MODELI	A	B	C	D	E	ϕF	no	ϕG
SVAZ 2 40 0.25/4	500	100	25	454	208	12,5	4	424
SVAZ 2 45 0.37/4	550	100	25	504	208	12,5	4	474
SVAZ 2 50 0.37/4	600	100	25	654	208	12,5	4	454
SVAZ 2 40 0.18/6	500	100	25	454	208	12,5	4	424
SVAZ 2 45 0.25/6	550	100	25	504	208	12,5	4	474
SVAZ 2 50 0.25/6	600	100	25	654	208	12,5	4	454